

## PR5302 Dual Lamination Configuration/Installation



TEAMNisca, A Division of Kanematsu USA, Inc. 100 Randolph Rd, Somerset, NJ 08873

Copyright © 2007, Kanematsu USA. All rights reserved. Revision date November 12, 2008

TEAMNisca® and the TEAMNisca® logo are a registered trademark of Kanematsu USA, Inc. Microsoft® and Windows® are U.S. trademarks of Microsoft Corporation. Names of products mentioned herein are used for identification purposes only and may be trademarks and/or trademarks of their respective companies.


## Installing the 2<sup>nd</sup> unit EPROM

1. First, turn off the printer and unplug the laminator's power cord. Remove the back cover by removing the 6 screws, 2 on each side and 2 on the back (Fig 1).



**Fig 1**

2. Remove the standard ver 1.5 EPROM from the socket (Fig 2) and insert the 2<sup>nd</sup> unit EPROM (Fig 3). Replace rear cover after EPROM insertion.

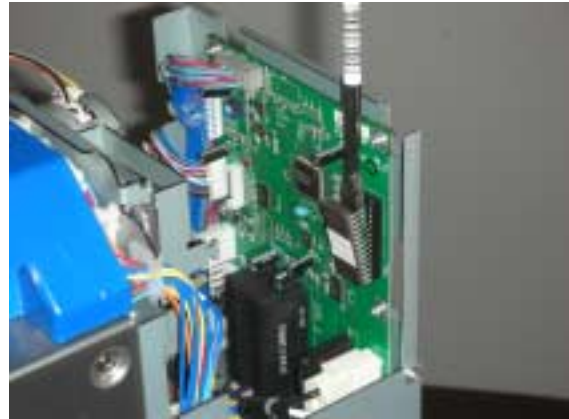

**Fig 2**



**Fig 3**

## Installing the Y Cable

1. First, connect the printer end of the cable to the laminator port on the back of the printer (Fig 4).



Fig 4

2. Next, connect the first and second laminator as shown in Fig 5.



Fig 5

3. Once you connected both units to the cable, the completed configuration should look exactly like the picture in Fig 6. Plug in the power cords for the laminators and the printer. You may now power up the printer. The printer will automatically detect both units and will add the second unit in the user mode as “Heat Roller 2” for configuration purposes.



Fig 6