

The printer may have the OMNIKEY 5121 or/and the OMNIKEY 5125 encoder installed.
Both options use the same driver and API.

Please visit the OMNIKEY website at: www.hidglobal.com/driverDownloads.php

1. Select the OMNIKEY 5125 Reader Board USB PROX encoder.
2. Download the following files to your desktop:
 - A. OMNIKEY 5x2x PC/SC driver
 - B. CardMan Synchronous API for Windows
3. Run the files that were saved to your desktop and follow the on-screen instructions